



NOTES:

1. STRIP CABLE ENDS AS SHOWN ON DRAWING.
2. CLEAN ALL DIRT FROM THE CABLE SHEATH ENDS USING A SUITABLE SOLVENT AND ABRASE WITH THE RASP OR WIRE BRUSH.
3. WIPE CLEAN THE CABLES SHEATH WHERE THE OUTER SHEATH WILL REST.
4. CRIMP THE COMPRESSION LINKS ONTO THE LONGER TAILS AND SLIDE ALL THE OUTER AND INNER HEAT SHRINK SLEEVES ONTO THIS END.
5. CRIMP THE COMPRESSION LINKS ONTO THE OTHER TAILS.
6. PLACE THE INNER SLEEVES CENTRALLY OVER THE LINKS AND HEAT GENTLY FROM THE MIDDLE OUTWARDS UNTIL MASTIC SQUEEZES OUT OF THE ENDS.
7. SHRINK ON OUTER SLEEVES AS FOR STEP 6.
8. ALLOW TO COOL 15 MINUTES BEFORE BACKFILLING TRENCH.

COMPRESSION LINKS

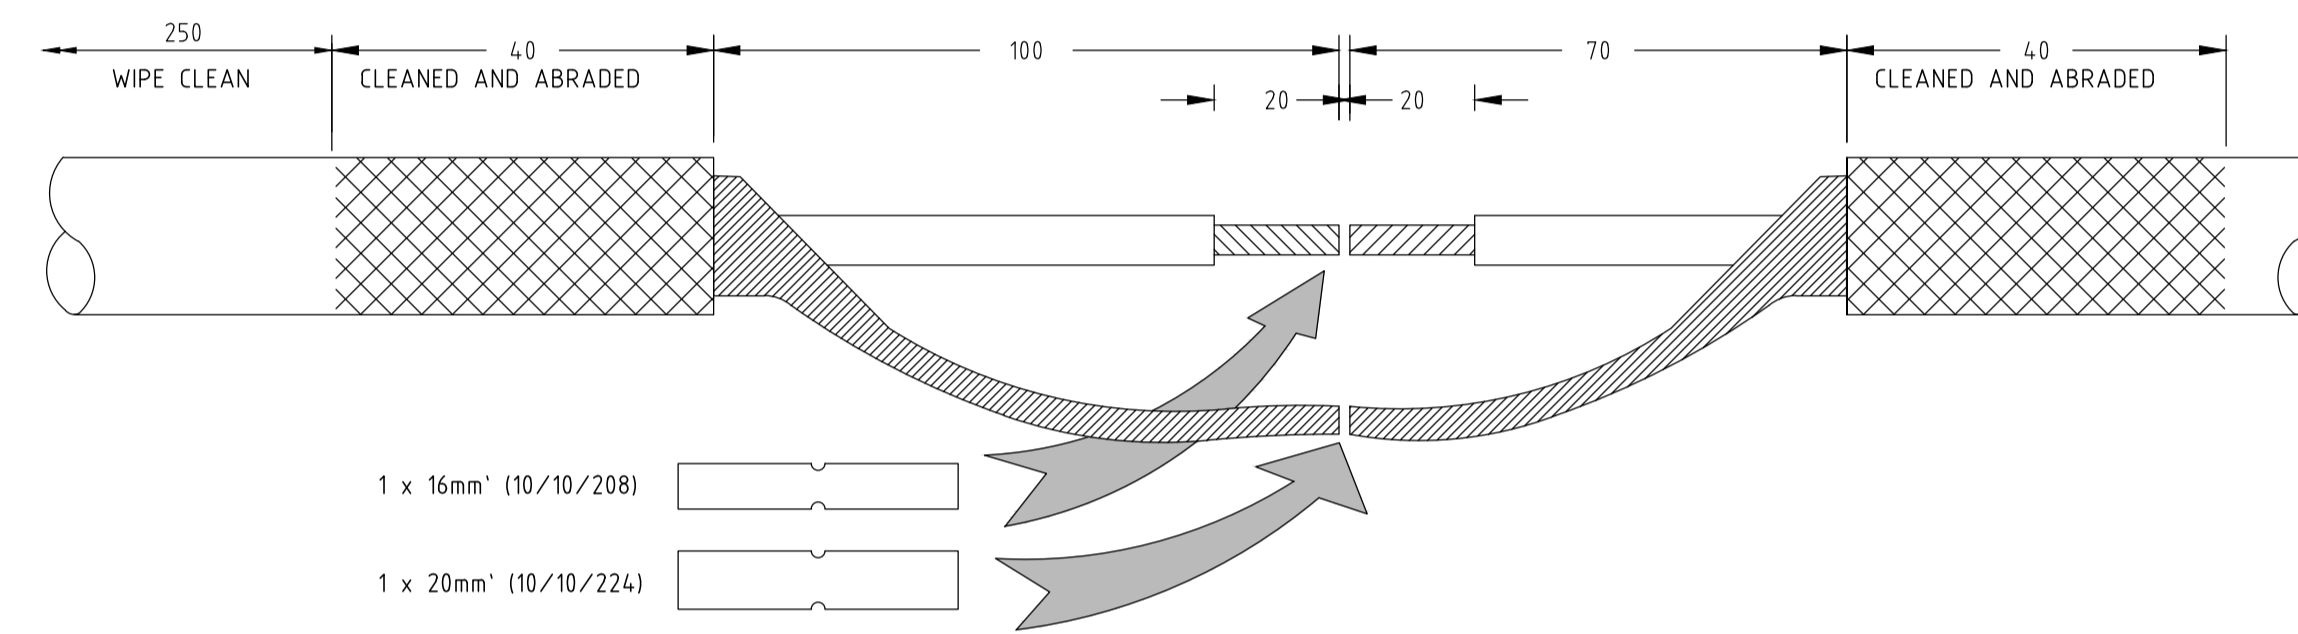

HEAT SHRINK SLEEVES (MASTIC)

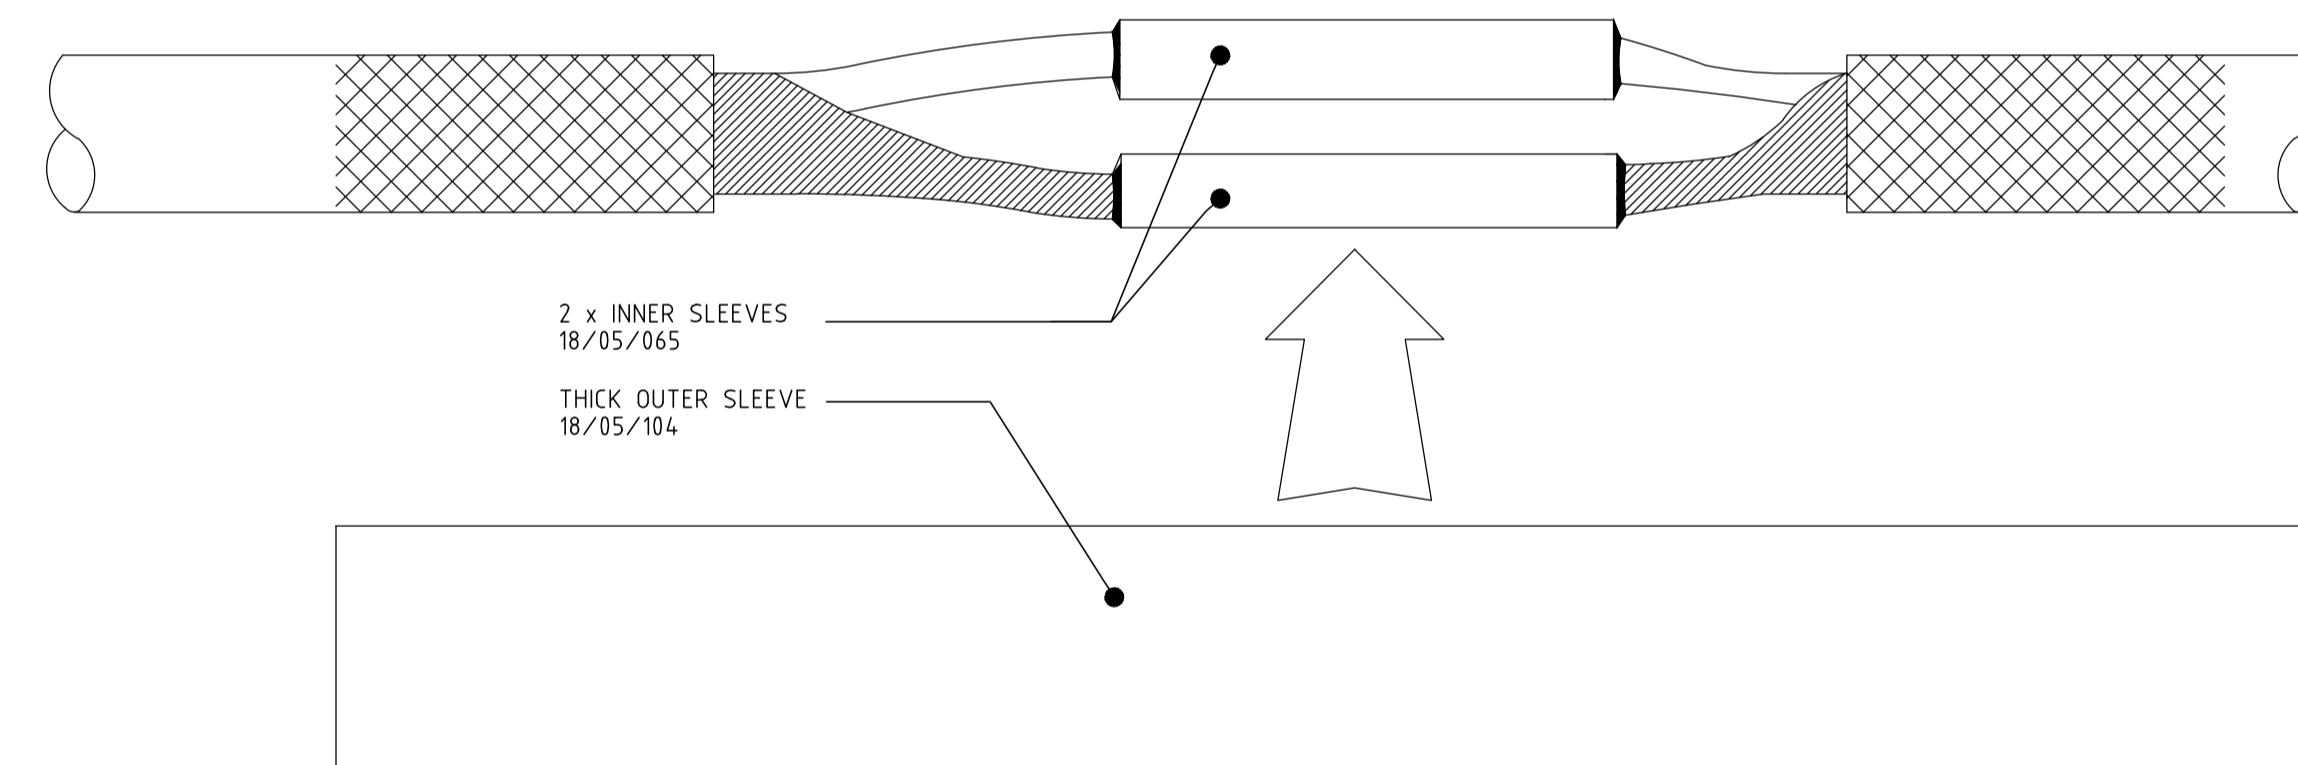

ACT
Government

STANDARD DRAWING

**STREETLIGHTING 10 NEUTRAL
SCREEN STRAIGHT THROUGH JOINT**

DRAWING NOT TO SCALE - N.T.S.

Authorised:

Latest Revision Details

| Rev | Amendment | Date |
|-----|-------------------------|----------|
| 0 | BASED ON DRG 0512-01-21 | 21/12/21 |

Drawing No. **ACTSD-4021** Revision **0**